


REMOVAL

1. REMOVE FRONT ENGINE UNDER COVER

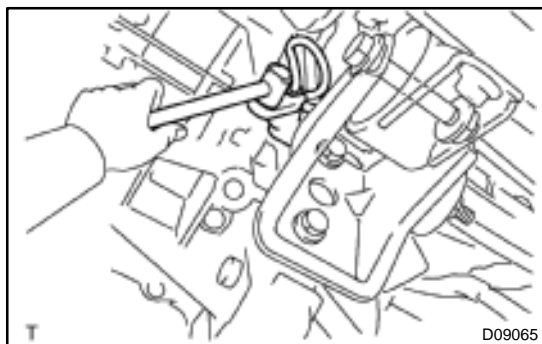


2. DISCONNECT CLUTCH LINE FROM RELEASE CYLINDER

Using SST, disconnect the clutch line from the release cylinder.

SST 09023-00100

HINT:

Use a container to catch the fluid.

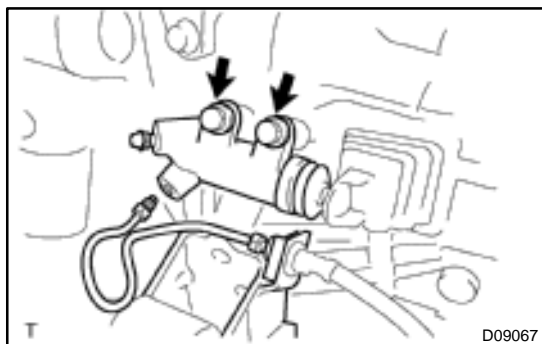

3. REMOVE RELEASE CYLINDER

Remove the 2 bolts and release cylinder.