
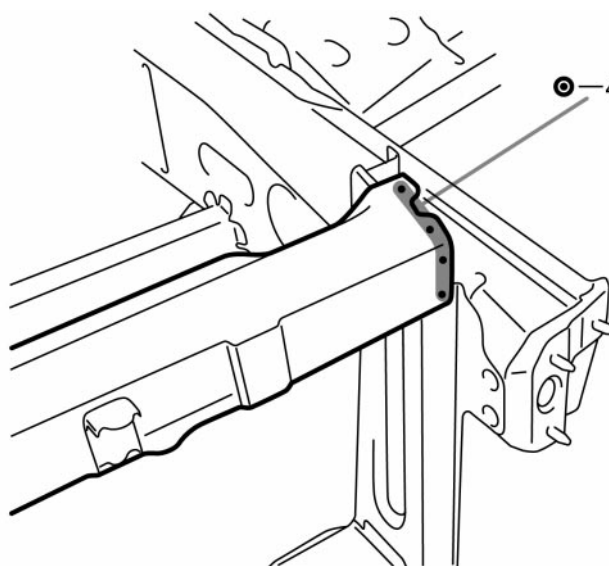


RADIATOR UPPER SUPPORT (ASSY)

REPLACEMENT

1. REMOVE RADIATOR UPPER SIDE SUPPORT (See page BP-1)
2. REMOVE RADIATOR UPPER SUPPORT

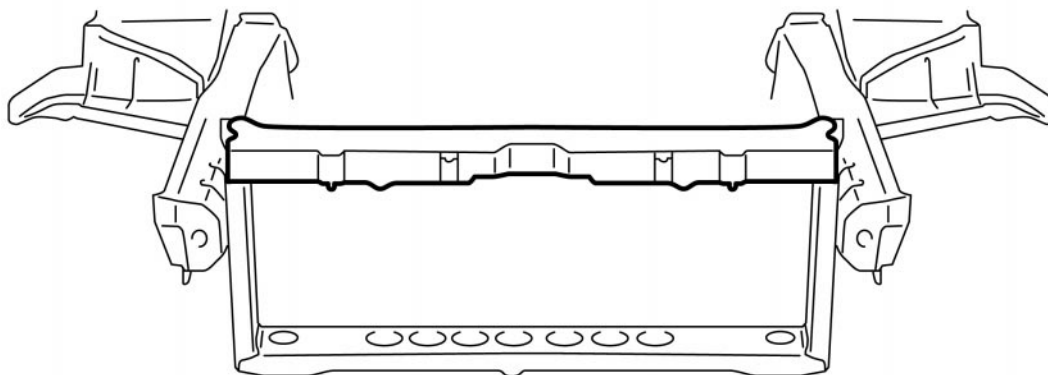


3. INSTALL RADIATOR UPPER SUPPORT

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

First install the hood lock support.

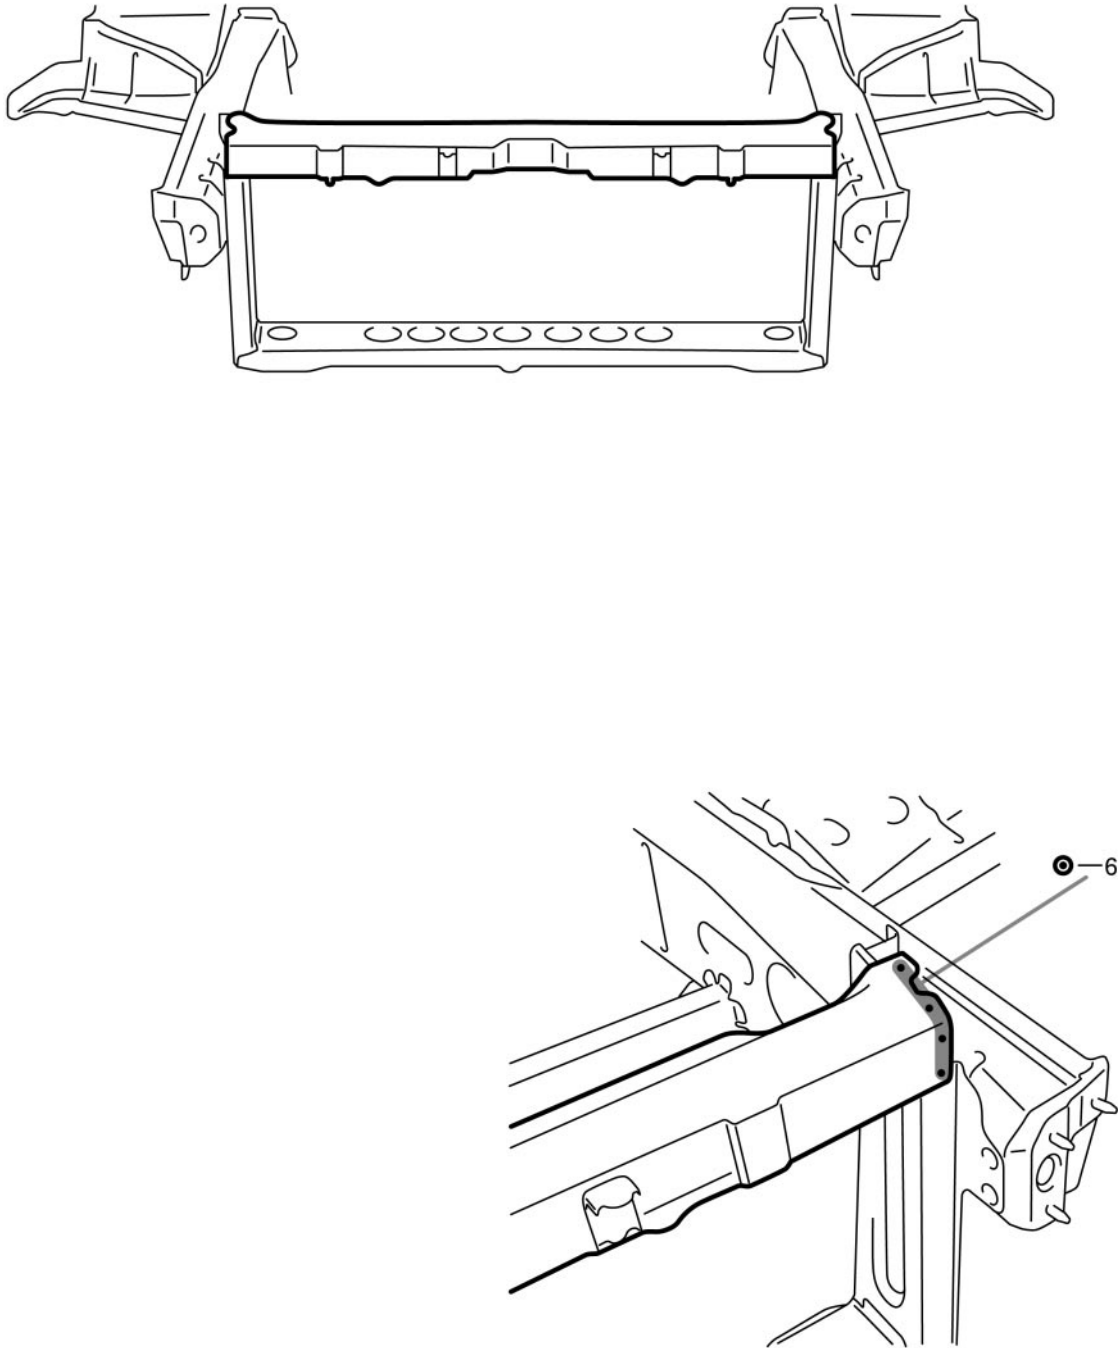

-
4. **INSTALL RADIATOR UPPER SIDE SUPPORT (See page BP-2)**
 5. **MEASURING THE FRONT LUGGAGE COMPARTMENT DIMENSIONS (See page BP-95)**
 6. **APPLYING SEALER TO THE FRONT LUGGAGE COMPARTMENT (See page PC-1)**
 7. **APPLYING ANTI-RUST AGENT**
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.