


## TERMINALS OF ECU

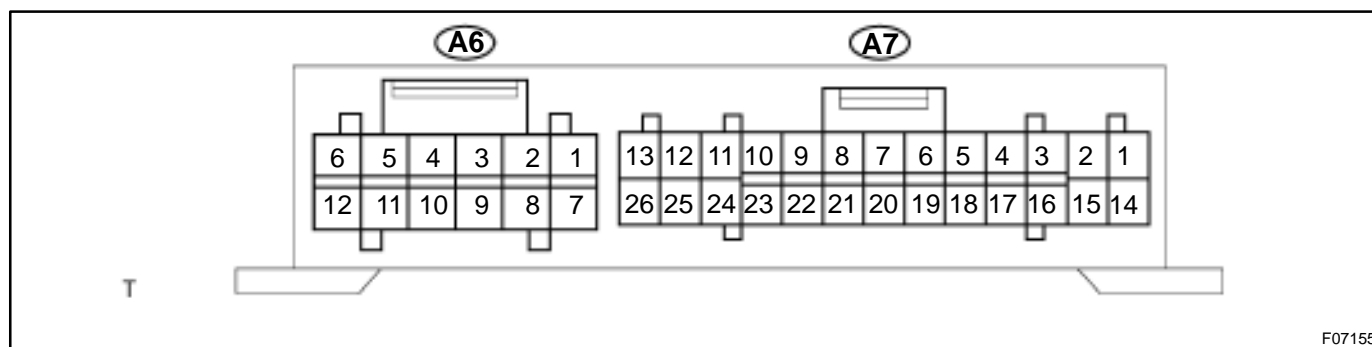

F07155

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
IG1 (A7-13) – GND (A7-12, 25)	B-R ↔ W-B	IG switch ON	10 – 14
R+ (A7-26) – SR (A6-7)	L ↔ R-B	IG switch ON, ABS warning light OFF	9 – 14
R+ (A7-26) – MR (A6-1)	L ↔ R-Y	IG switch ON	Below 1.0
SFRR (A7-1) – GND (A7-12, 25)	W-L ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SFRH (A7-2) – GND (A7-12, 25)	W-G ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SFLR (A6-6) – GND (A7-12, 25)	W ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SFLH (A6-5) – GND (A7-12, 25)	W-R ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SRRR (A7-12) – GND (A7-12, 25)	R-G ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SRRH (A6-11) – GND (A7-12, 25)	R-B ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SRLR (A7-14) – GND (A7-12, 25)	R-W ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SRLH (A7-15) – GND (A7-12, 25)	R-L ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
WA (A7-11) – GND (A7-12, 25)	R-G ↔ W-B	IG switch ON, ABS warning light ON	10 – 14
		IG switch ON, ABS warning light OFF	Below 2.0
STP (A7-5) – GND (A7-12, 25)	G-W ↔ W-B	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 – 14
D/G (A7-24) – GND (A7-12, 25)	W-G ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
Tc (A7-8) – GND (A7-12, 25)	P-B ↔ W-B	IG switch ON	8 – 14
Ts (A7-21) – GND (A7-12, 25)	G-R ↔ W-B	IG switch ON	8 – 14
FR+ (A6-3) – FR- (A6-9)	R ↔ G	IG switch ON, Slowly turning right front wheel	AC generation
FL+ (A6-8) – FL- (A6-2)	L ↔ P	IG switch ON, Slowly turning left front wheel	AC generation
RR+ (A7-10) – RR- (A7-23)	B ↔ W	IG switch ON, Slowly turning right rear wheel	AC generation
RL+ (A7-22) – RL- (A7-9)	Y ↔ BR	IG switch ON, Slowly turning left rear wheel	AC generation
MT (A6-10) – GND (A7-12, 25)	L-W ↔ W-B	IG switch ON	Below 1.5