DI6P0–03
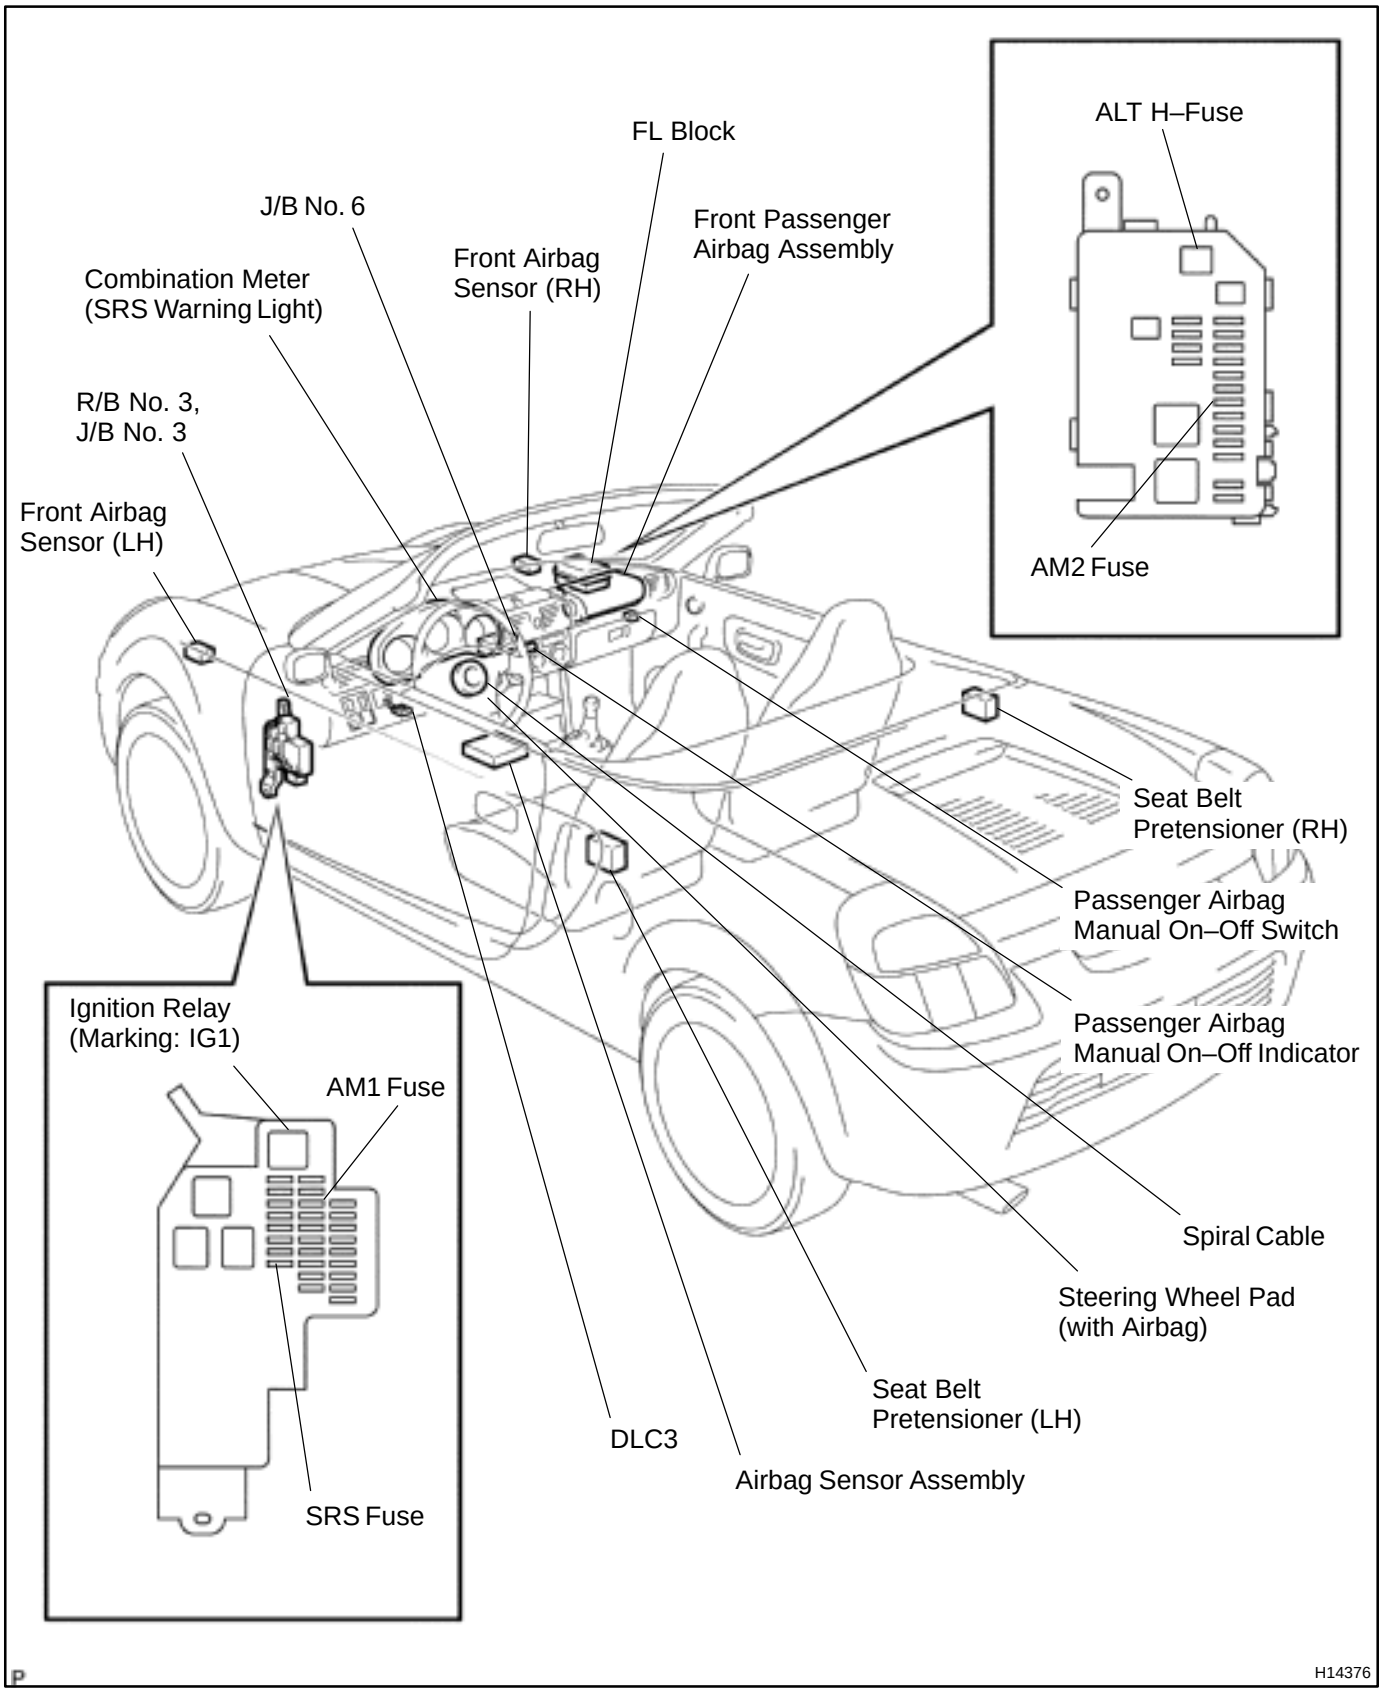
PARTS LOCATION