


## REMOVAL

1. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER
2. DISCONNECT LEVEL WARNING SWITCH CONNECTOR
3. DRAW OUT FLUID WITH SYRINGE

### NOTICE:


Do not let brake fluid remain on a painted surface. Wash it off immediately.

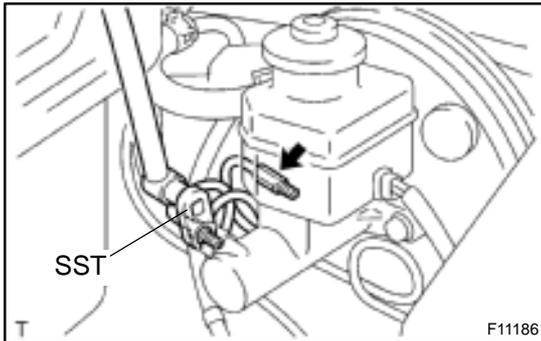

4. DISCONNECT BRAKE LINES FROM BRAKE MASTER CYLINDER

Using SST, disconnect the 2 brake lines.

SST 09023-00100

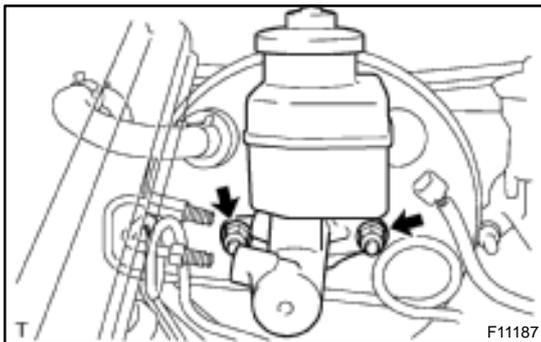

5. REMOVE BRAKE MASTER CYLINDER

- (a) Remove the 2 nuts.
- (b) Pull out the master cylinder.
- (c) Remove the O-ring from the master cylinder.