


INSTALLATION

1. INSTALL ELECTRIC COOLING FAN

- (a) Install the electric cooling fan with the 2 bolts.

Torque: 5 N·m (51 kgf·cm, 44 in.-lbf)

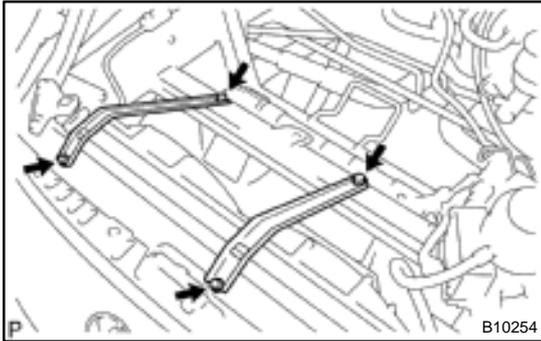

- (b) Install the 2 spear wheel carrier extensions with the 2 bolts and 2 nuts.

Torque: 8 N·m (82 kgf·cm, 70 in.-lbf)

- (c) Connect the 2 electric cooling fan connectors.

2. INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER AND TOOL BOX