


## Door Key Lock and Unlock Switch Circuit

### CIRCUIT DESCRIPTION

The door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminal 4 of the switch is grounded and when the key is turned to the unlock side, terminal 3 of the switch is grounded.

### WIRING DIAGRAM

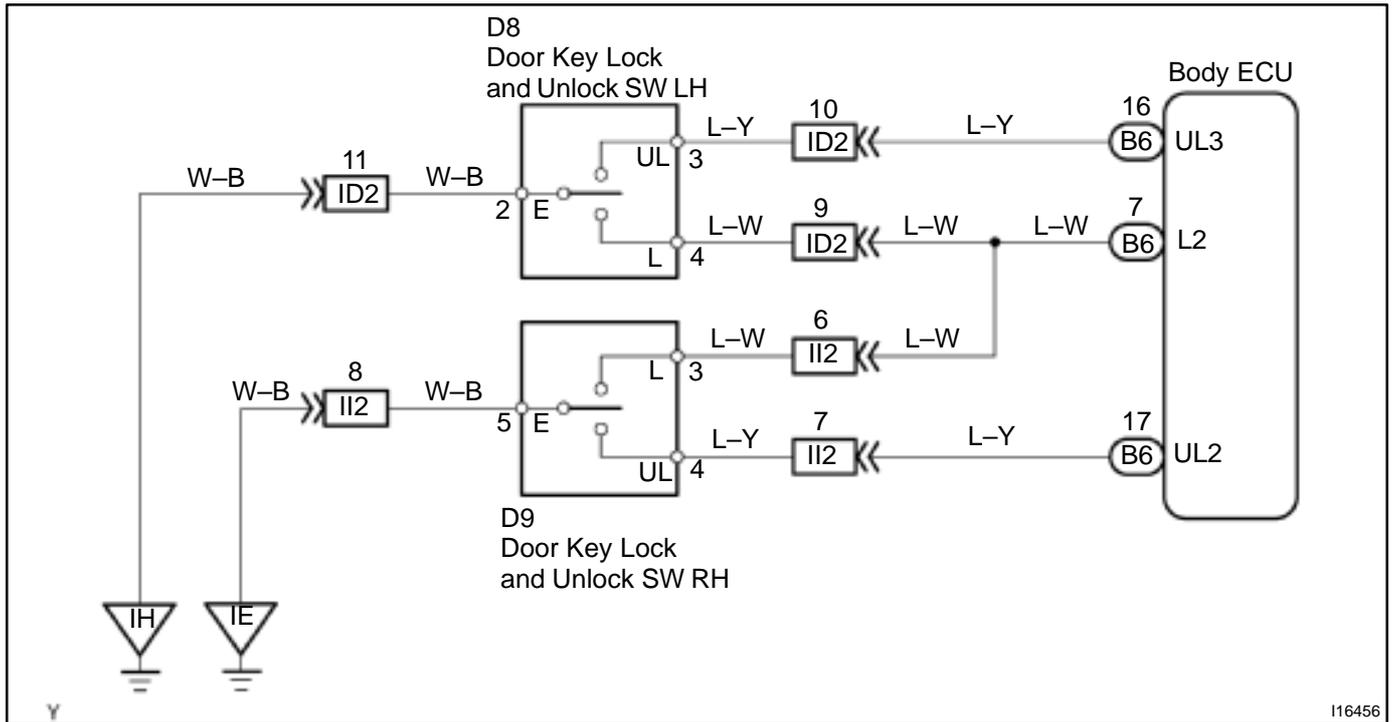

### INSPECTION PROCEDURE

1	Check door key lock and unlock switch (See page <a href="#">DI-374</a> ).
---	---

**NG** → Replace door key lock and unlock switch.

**NG**

<b>2</b>	<b>Check harness and connector between door key lock and unlock switch and body ECU (See page <a href="#">IN-28</a>).</b>
----------	---

<b>NG</b>	<b>Repair or replace harness or connector.</b>
-----------	--

<b>OK</b>
-----------

<b>Proceed to next circuit inspection shown on problem symptoms table (See page <a href="#">DI-359</a>).</b>
--